



**Assembly Instructions for  
Breadboard connector  
SPIKE Prime Ultrasonic  
sensor  
BCKSPPU**

- Requires Soldering iron.


1) Attach fine pitch connector to PCB and solder from top.

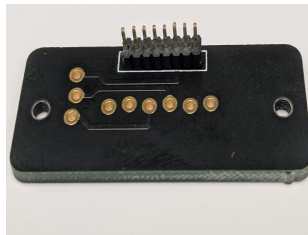

2) Attach 3 pin Headers to 3.3V,Vcc GND connection as shown and solder from Bottom.

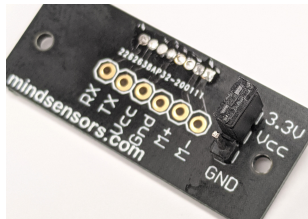

3) Install the yellow 6 pin socket as shown and solder from bottom, clip pins.

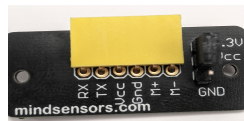

**mindsensors.com**